Cable pipes - Corrosion repair

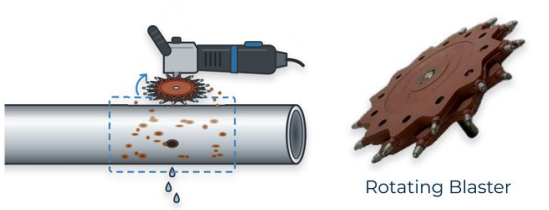

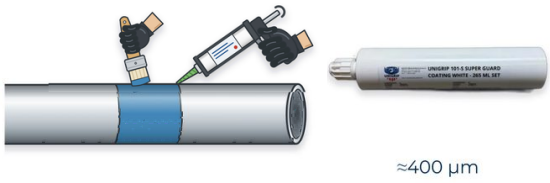

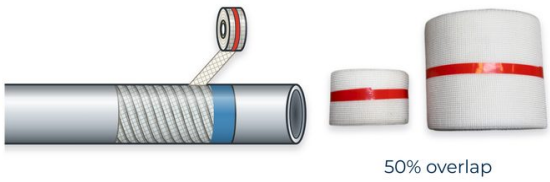



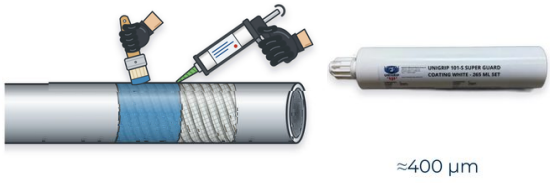

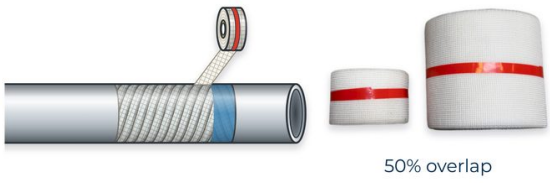



Repair of Cable Pipes using SepcoTech Epoxy & Super Wrap Reinforcement Tape solution.

1. Surface preparation acc. to SepcoTech standards, over the affected area.

2. Apply first layer of SepcoTech Super Guard Coating - approx. 400 µm.

3. Wrap the Super Wrap Reinforcement Tape into the Super Guard Coating - while still wet with 50% overlap of the tape.

4. Allow semi-curing.

5. Apply second layer of SepcoTech Super Guard Coating - approx. 400 µm.

6. Wrap the Super Wrap Reinforcement Tape into the Super Guard Coating - while still wet with 50% overlap of the tape.

7. Allow final curing.

Note: Make sure that the coating penetrates the Super Wrap Reinforcement Tape while wrapping. In case of larger holes use SepcoTech Putty stick to preseal the areas or pipe shells.

Includes AI generated images