GRE Scrubber Pipe

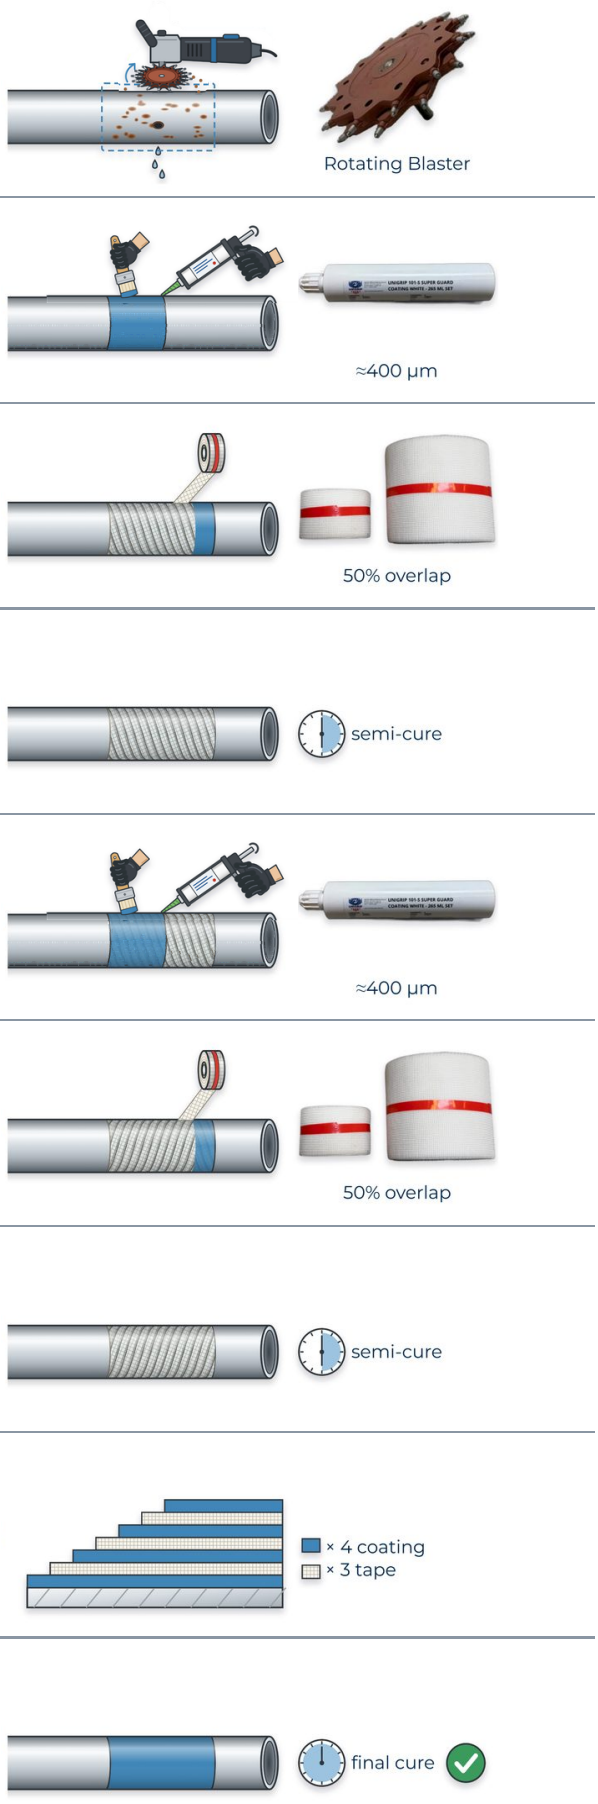

Repair of cracks and leaking scrubber wash water pipes (GRE or steel) using SepcoTech Epoxy & Super Wrap Reinforcement Tape solution.

1. Surface preparation acc. to SepcoTech standards, over the affected area.

2. Apply first layer of SepcoTech Super Guard Coating - approx. 400 µm.

3. Wrap the Super Wrap Reinforcement Tape into the Super Guard Coating - while still wet with 50% overlap of the tape.

4. Allow semi-curing.

5. Apply second layer of SepcoTech Super Guard Coating - approx. 400 µm.

6. Wrap the Super Wrap Reinforcement Tape into the Super Guard Coating - while still wet with 50% overlap of the tape.

7. Allow semi-curing.

8. Repeat this method until minimum 4 layers of coating and 3 layers of tape are obtained.

9. Allow final curing.

Note: Make sure that the coating penetrates the Super Wrap Reinforcement Tape while wrapping. In case of larger holes use SepcoTech Putty stick to preseal the area.

Includes AI generated images