Sea water strainer - Protection

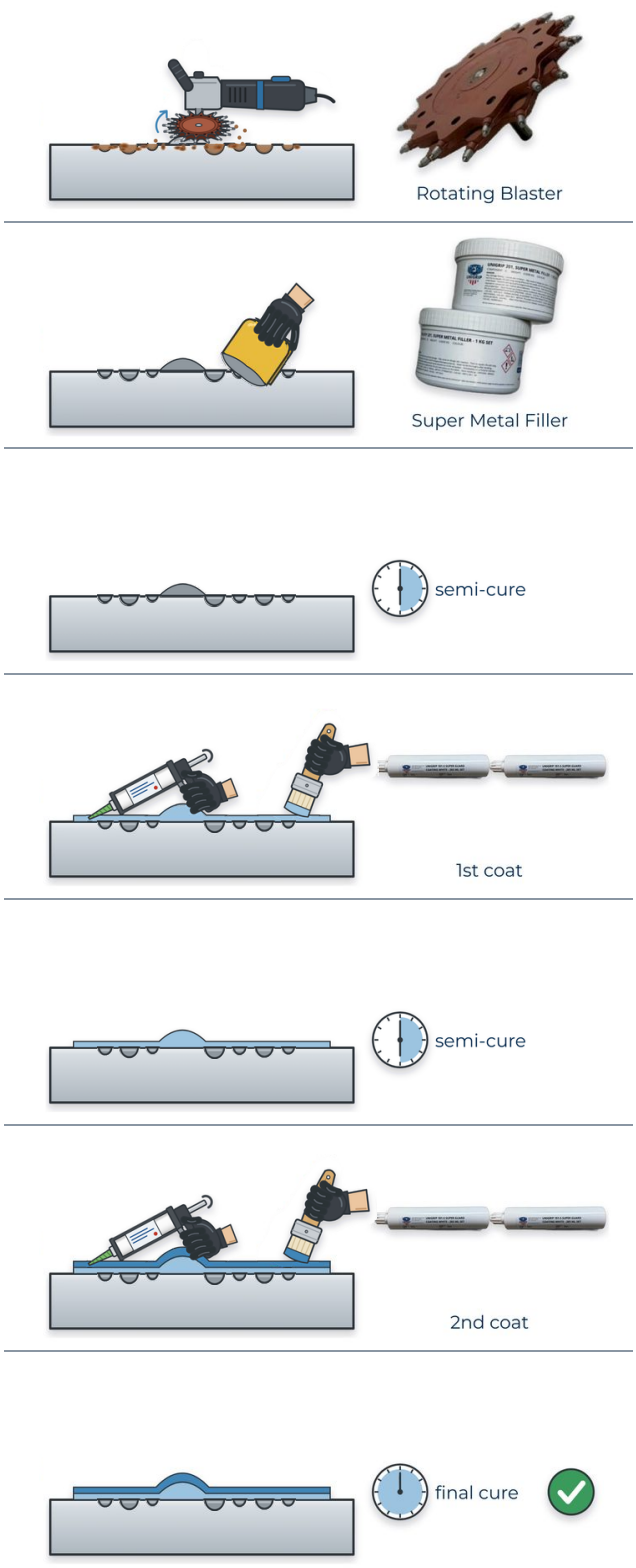

Life extension of Sea Water Strainers exposed to erosion, corrosion and bimetallic corrosion.

1. Surface preparation acc. to SepcoTech standards, over the affected area.

2. Rebuild the surface to its original dimensions and structure using SepcoTech Super Metal Filler in the heavily deteriorated areas and in the welding areas.

3. Allow semi-curing.

4. Apply the first layer of SepcoTech Super Guard or Aqua Guard Coating.

5. Allow semi-curing.

6. Apply the second layer of SepcoTech Super Guard or Aqua Guard Coating.

7. Allow final curing.

Note: By following SepcoTech technical guidance this procedure can be done by crew during voyage.

Includes AI generated images