Seal a crack

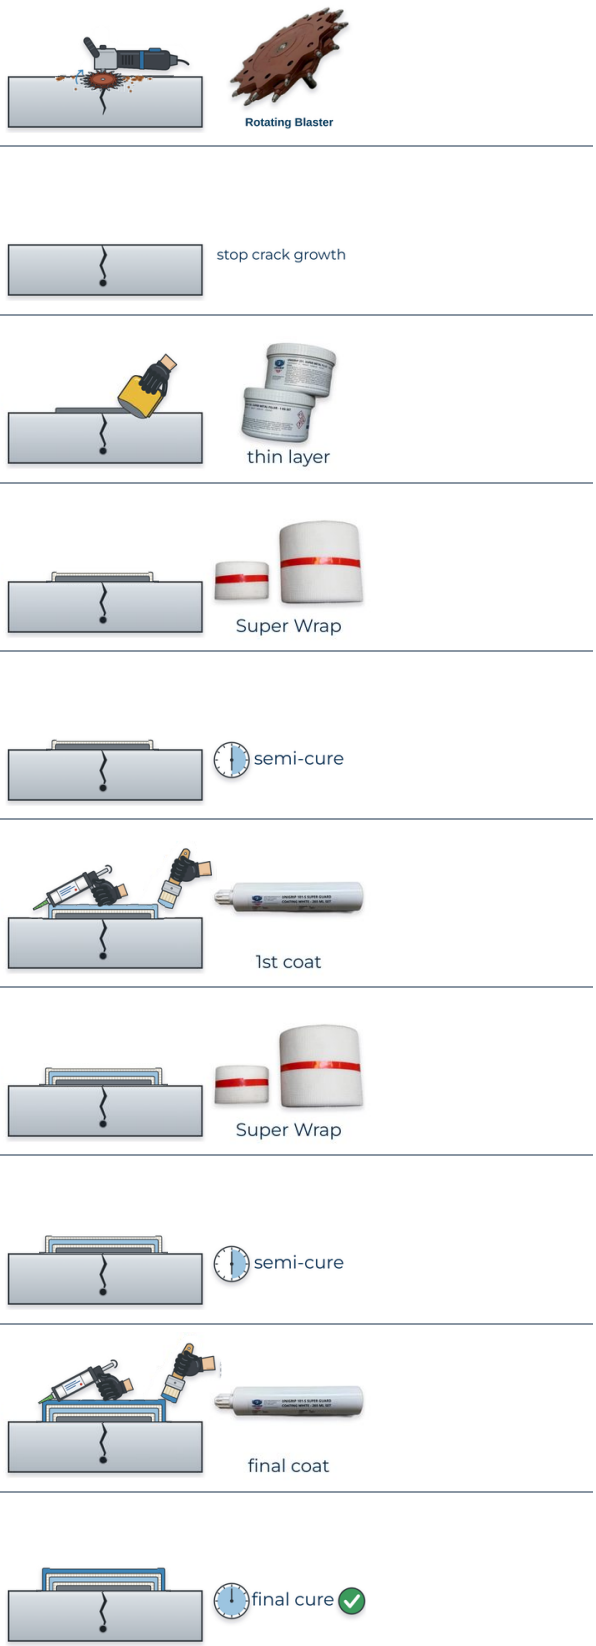

Seals cracks by using SepcoTech epoxy compound/coating and Super Wrap Reinforcement Tape to prevent leaks.

1. Surface preparation acc. to SepcoTech standards, over the affected area.

2. Ensure mechanically that the crack does not develop any further.

3. Apply the Super Metal Filler in a thin layer over the damaged area.

4. Apply Super Wrap Reinforcement Tape into the Super Metal Filler - while still wet.

5. Allow semi-curing.

6. Apply first layer of SepcoTech Super Guard Coating.

7. Apply Super Wrap Reinforcement Tape into the Super Guard Coating - while still wet.

8. Allow semi-curing.

9. Apply final layer of coating.

10. Allow final curing.

Note: Applying SepcoTech products does not prevent the crack from developing.

Includes AI generated images